

## **DC Battery Coupler**

## Quick Installation Guide

- Remove your original battery from your camera and slide this coupler to your battery cartridge.
- Make sure to close the lid of the battery compartment and let the wire pass through the side rubber slot (check image below).
- Plug the dummy battery cord into the "DSLR Out" socket of the DSLR Buddy or Pocket Powerbox.

You can also use Ultimate Powerbox v2 or Pocket Powerbox Advance Adjustable Output but you have to configure output voltage to <u>8Volts only.</u>

Please take notice that a higher voltage will cause damage to your camera.



• During startup of your camera you might see the screen below: Just select "OK" and the camera will operate as usual.

