




## Pocket PowerBox Advance Small Factor PC Top Plate Installation


The package includes the following items.

- 1 x Top plate bracket for PPBADV
- 6 x M3x6mm Allen Bolts

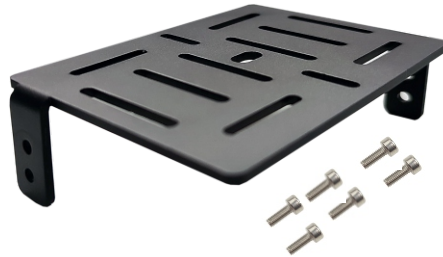

### Step 1

Place the bracket under your mini PC (NUC) and use 2 x M3x6mm Allen bolts to securely lock them as the black arrows shown below.

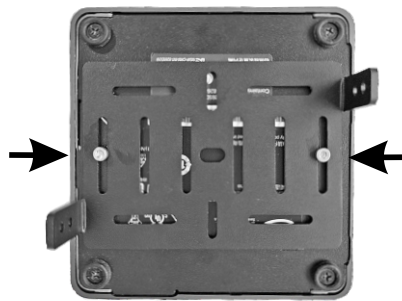

### Step 2

Locate the two vertical threads on the left of the enclosure shown by the black arrows.

Place the already bonded bracket with the mini PC on top of PPBADV and use 4 x M3x6mm Allen screws to securely lock them on both sides.



Mounting brackets sold separately  
(SKU: BRACK-PPBADV)

*You are ready to go...*