
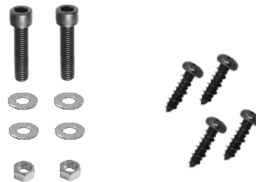


Pegasus Ultimate Power Box v.2 dovetail brackets installation

The package including the following items.

- 2 x identical dovetail brackets for UPB v.2
- 2 x m4x20mm Allen bolts
- 4 x m4 spacers
- 2 x m4 nuts
- 4 x 3.5x13mm philips head screws

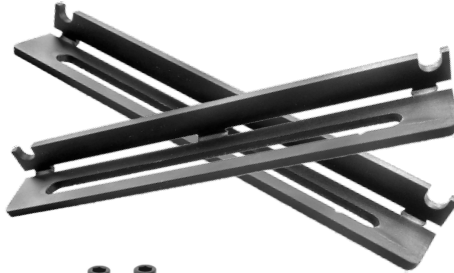

Step 1

Untie the two (2) stock screws on each side, shown by the black arrows (keep them in safe place as you don't need them anymore).



Step 2

Place the adapters on each side and use the 3.5x13mm screws to securely lock them.



Step 3

You can now mount the whole setup into the dovetail using the m4x20mm bolts, spacers and nuts.



You are ready to go...