

Pegasus Pocket PowerBox Advance dovetail brackets installation


The package includes the following items.

- 2 x identical dovetail brackets for PPBA
- 2 x M4x30mm Allen bolts
- 4 x M4 spacers
- 2 x M4 nuts
- 4 x M3x6mm Allen Bolts




Step 1

Locate the 2 vertical threads on both sides, shown by the black arrows.

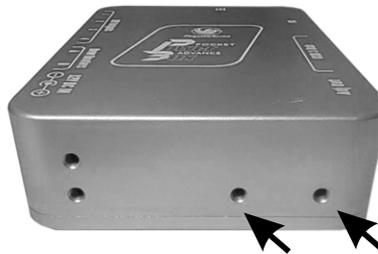

Step 2

Place the adapters on each side and use the 3x6mm Allen screws to securely lock them.

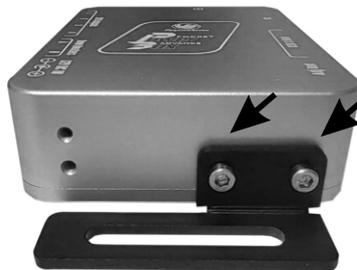

Step 3

You can now mount the whole setup into the dovetail using the M4x30mm bolts, spacers and nuts.



You are ready to go...